

사용설명서 Operating Instructions

CRP-P1009S Series

1.8L(2~10 Persons) / 1.8L(2~10인분)

**CUCKOO**  
always new

happiness

**NO.1 CUCKOO**

Electric Pressure Rice cooker/warmer



design

love

emotion

Thank you very much for purchasing "CUCKOO"  
Electric Rice cooker/warmer

Read the following instruction manual before use. Save this instruction manual for future reference. This manual will be useful if you have any questions or have problems operating the rice cooker.

저희 쿠쿠 압력보온밥솥을 애용해 주셔서  
대단히 감사 드립니다.

이 사용설명서는 잘 보관하여 주십시오.  
사용 중에 모르는 사항이 있을 때나 기능이 제대로  
발휘되지 않을 때 많은 도움이 될 것입니다.

**CUCKOO ELECTRONICS CO., LTD.**

# CONTENTS

## CONTENTS

### BEFORE USING

Important safeguards	3
Specifications	5
Safety precautions	6~7
Name of each part	14
Function operating part	15
How to clean	24~28

### WHEN USING

How to set or cancel voice guide function	15
Before cooking rice	16
How to cook	17~18
MY MODE (Cuckoo Customized Taste Function)	19
How to use "GABA Rice (Brown rice)"	20
How to preset timer for cooking	21
For the best taste of rice	22
To keep cooked rice warm and tasty	23

### BEFORE ASKING FOR SERVICE

Check before asking for service	29~31
---------------------------------	-------

### COOKING GUIDE

Recipe	68~69
--------	-------

## 目录

### 使用前

Important safeguards	3
产品规格	5
安全警告	12~13
产品部件名称	50
功能显示部显示异常时检查方法	51
清洁保养方法	60~64

### 使用时

功能操作部名称及作用/语音功能设定与解除	51
煮饭前准备事项	52
煮饭方法	53~54
调节饭味功能使用方法	55
糙米/发芽	56
预约煮饭方法	57
保温/再加热方法	58
保温再加热方法	59

### 故障咨询前

常见故障及处理方法	65~67
-----------	-------

### 料理指南

料理指南	72~73
------	-------

## 목 차

### 사용하기전에

Important safeguards	3
제품규격	5
안전상의 경고	10~11
각 부분의 이름	32
기능 조작부의 이름과 역할	33
제품 손질 방법	42~46

### 사용할 때

음성안내 기능의 설정과 해제	33
취사 전 준비사항	34
취사는 이렇게 하십시오	35~36
쿠쿠 맞춤취사 / 누룽지는 이렇게 하십시오	37
현미발아는 이렇게 하십시오	38
예약취사 / 만능찜은 이렇게 하십시오	39
맛있는 밥을 드시려면	40
밥을 맛있게 보온하려면	41

### 고장 신고 전에

고장신고 전에 확인 하십시오	47~49
-----------------	-------

### 요리안내

요리안내	70~71
------	-------

## TABLE DES MATIÈRES

### AVANT L'UTILISATION

Important safeguards	4
Spécifications du produit	5
Avertissement de sécurité	8~9

## IMPORTANT SAFEGUARDS

1. Read all instructions before using this appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and / or injury to persons do not immerse cord, plugs, or Pressure Cooker Body in water or any other liquid.
4. Close supervision is necessary when this appliance is used by or near children. This appliance is not intended for use by young children without supervision.
5. Unplug cord from outlet when not in use and before cleaning.  
Allow appliance to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, and / or injury to persons.
8. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or your service agent.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas, electric burner, or in a heated oven.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
13. Do not use this appliance for other than its intended use.
14. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
15. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
16. Fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, etc while in operation.
17. To reduce the risk of electric shock, cook only in the provided removable container.
18. This appliance cooks under pressure. Improper use may result in scalding injury.  
Before operating the unit, properly secure and close the unit. See "Operating Instructions."
19. Do not cook foods such as applesauce, cranberries, cereals, macaroni, spaghetti, or other foods.  
These foods tend to foam, froth, and sputter, and may block the pressure releasing device
20. Before use always check the pressure releasing device for clogging.
21. Do not open the pressure cooker until the unit has cooled and internal pressure has been reduced.  
See "Operating Instructions."
22. Do not use this pressure cooker to fry in oil.

## SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

## ADDITIONAL IMPORTANT SAFEGUARDS

**WARNING :** This appliance generates heat and releases steam during use. Use proper precaution to prevent risk of burns, fires, other injuries, or damage to property.

1. Keep hands and face away from the Pressure Release Valve when releasing pressure.
2. Take extreme caution when opening the Lid after cooking. Severe burns can result from steam inside.
3. Never open the Lid while the unit is in operation.
4. Do not use without the inner Pot in place.
5. Do not cover the Pressure Valve with anything as an explosion may occur.
6. Do not touch the inner pot nor any heating parts, immediately after use.  
Allow the unit to cool down completely first.

This appliance is intended to be used in household and similar applications such as :

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.